


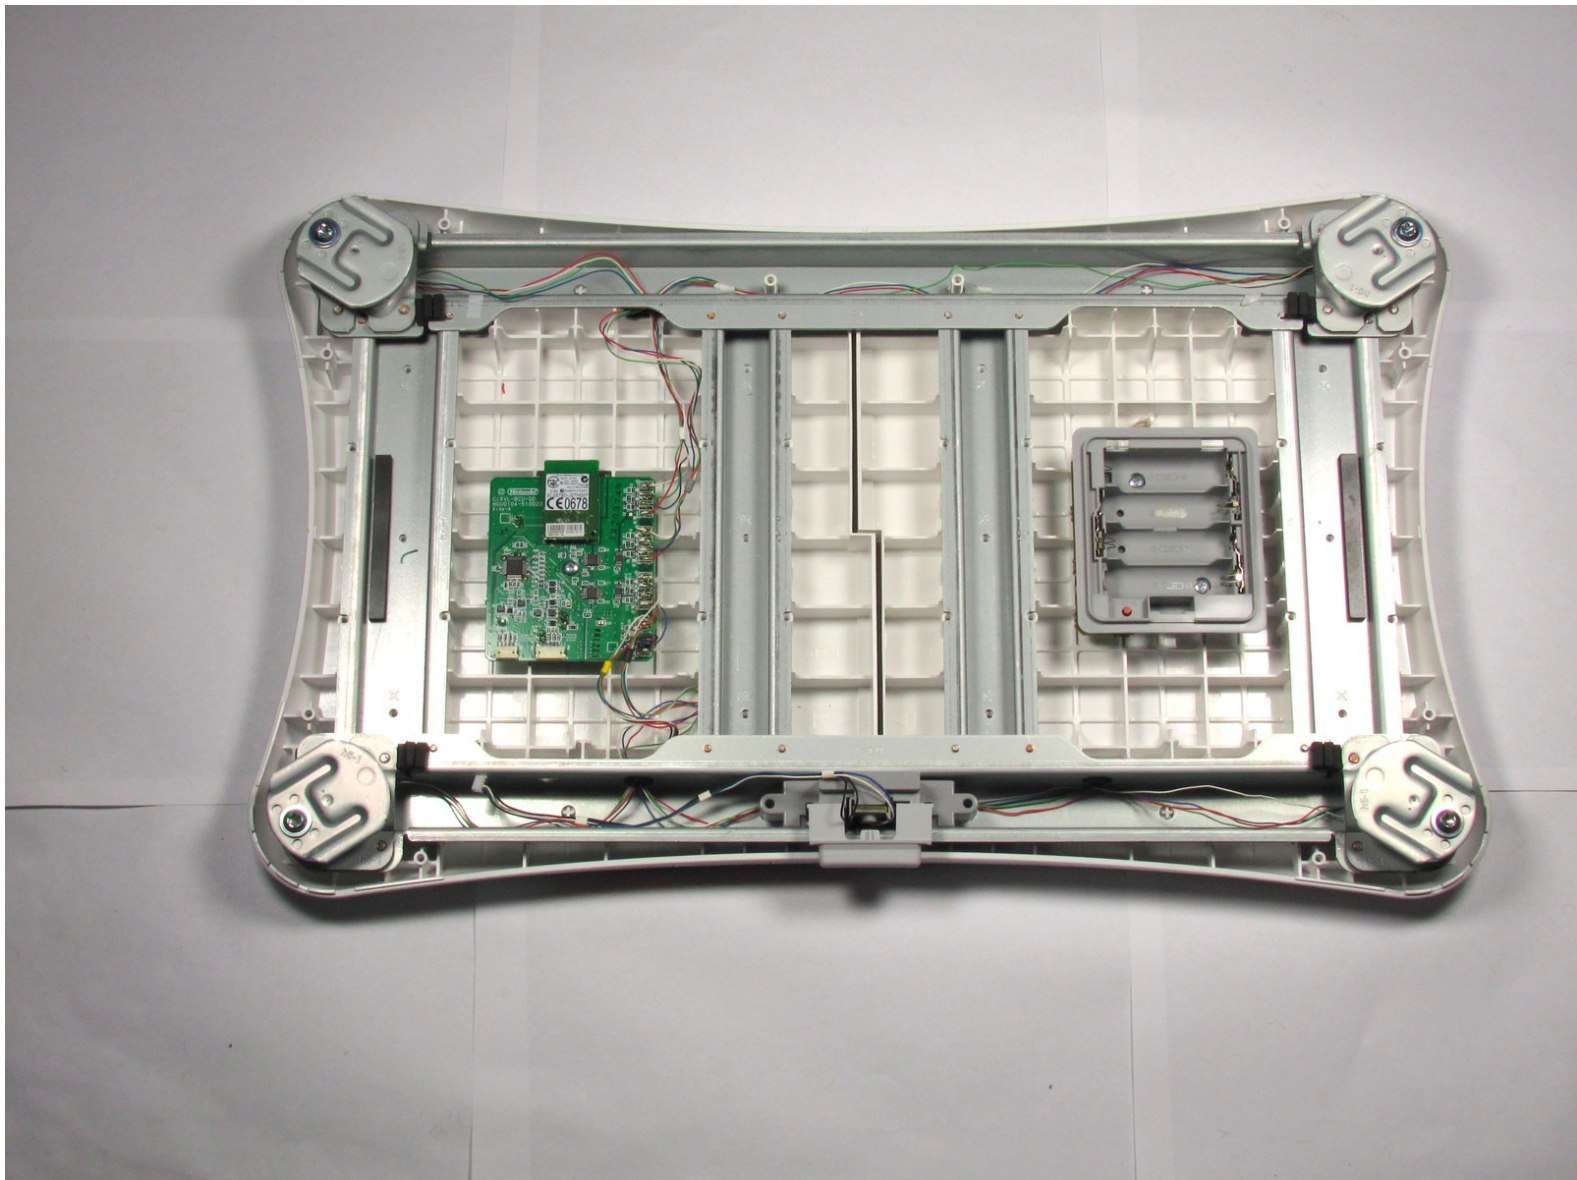

Wii Balance Board Front Cover Replacement

Use this guide to replace the Front Cover.

Written By: Cory Olson



INTRODUCTION

This guide will demonstrate how to replace the Front Cover of the Wii Balance Board.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [A new Wii Balance Board Front Cover](#) (1)

Step 1 — Unscrewing the Foot Cover



- Flip device upside-down so the plastic white board is facing the ground.
- Locate the four feet in the corners of the Balance Board.
- Unscrew the three 12.7 mm Philips screws from each foot cover.

Step 2 — Removing the Foot Cover




- Remove the grey plastic ring from the actual foot by lifting it up.

Step 3 — Removing the Foot




- Separate the loose foot from the device by lifting it up.

Step 4 — Removing the Additional Feet

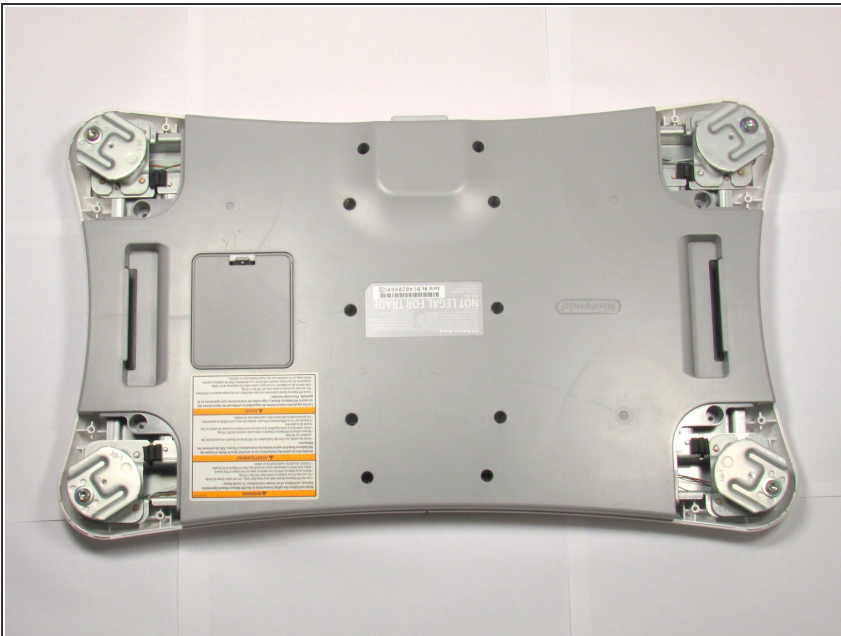

- Repeat steps two and three on the remaining four feet.

Step 5 — Unscrewing the Back Cover

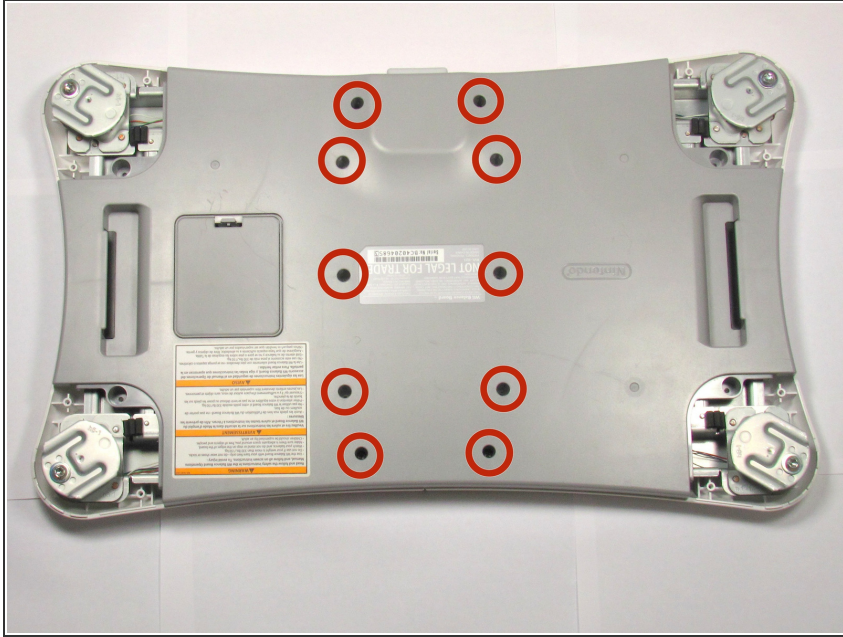



- Unscrew the ten 12.7 mm #1 screws.

Step 6 — Removing the Back Cover




- Lift off the gray back cover.

Step 7 — Battery Compartment

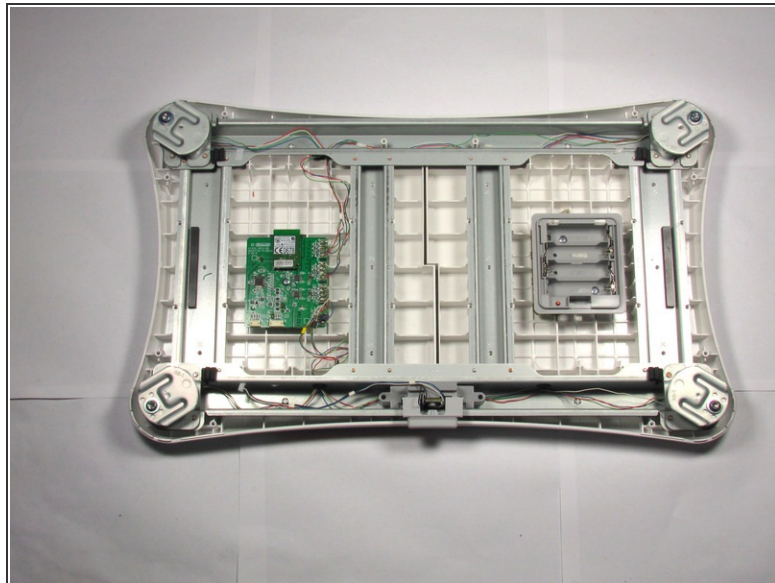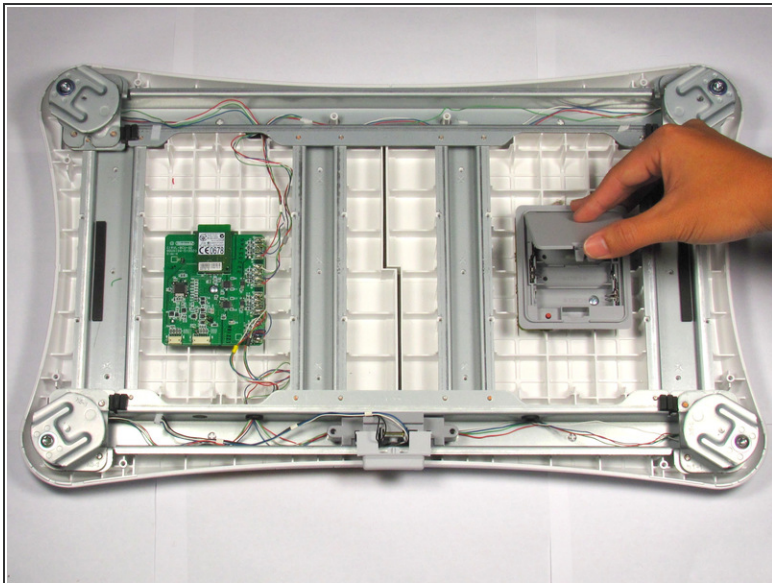


- Locate the grey battery compartment.
- Push the tab on the bottom and lift up completely to remove the cover to the batteries.

Step 8 — Removing the Battery Case

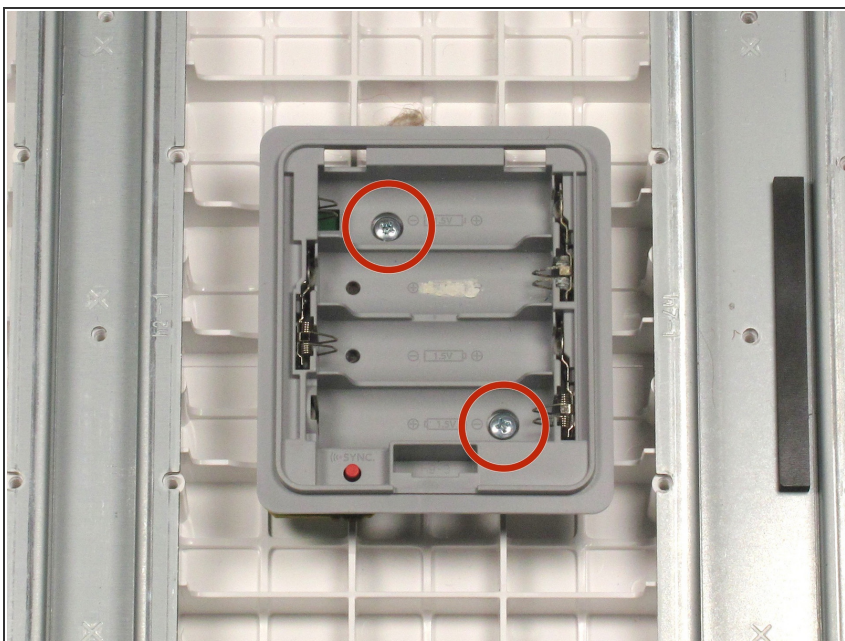


- Unscrew the two 6.35 mm #1 screws.
- Slide the battery case out.

Step 9 — Unscrewing the Frame

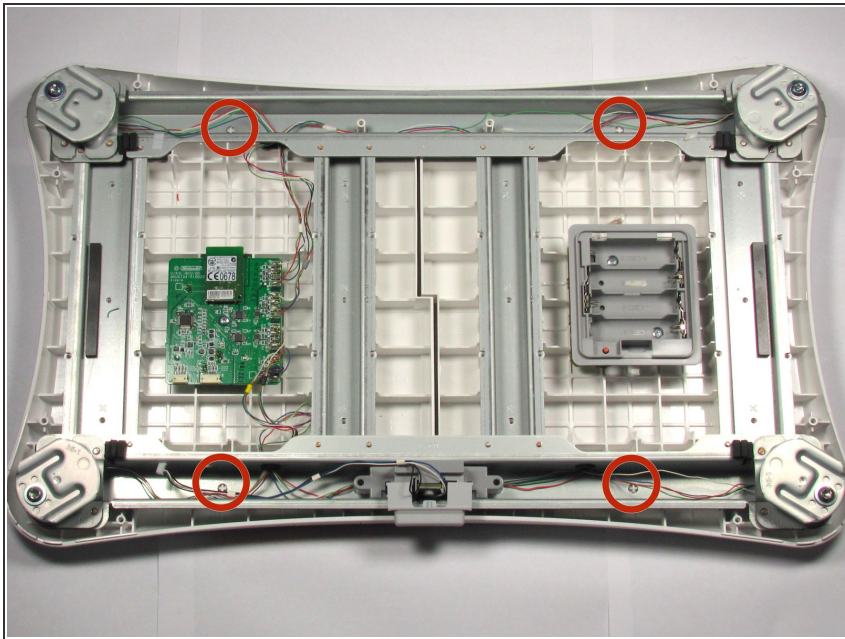

- Unscrew the four 12.7 mm #1 screws.

Step 10 — Removing the Frame

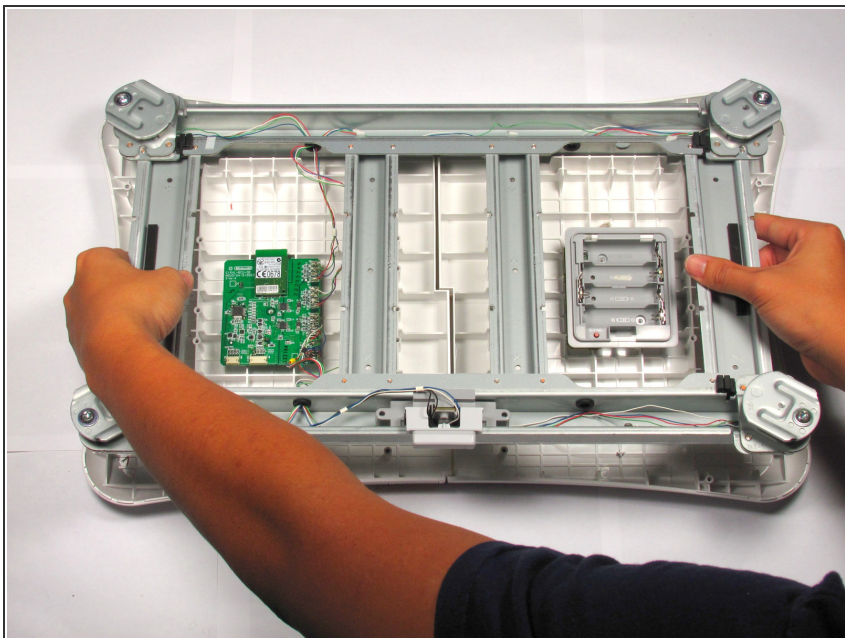

- Lift the frame, circuit board, and power supply out of the front case. These components are all connected.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-29 07:25:37 PM.